

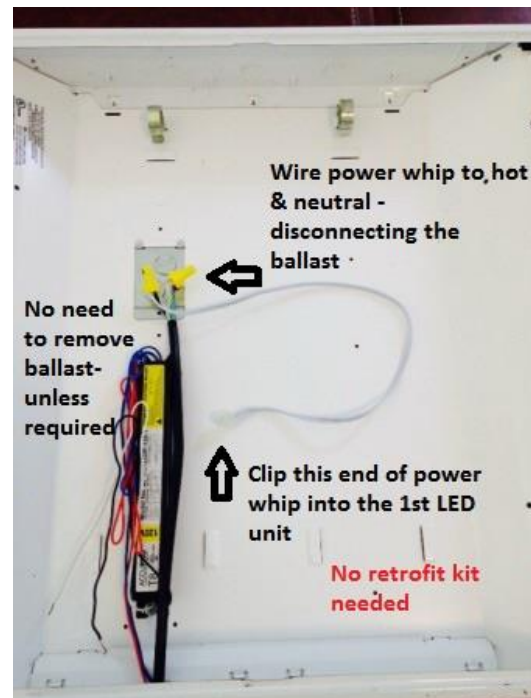


Easily & quickly convert a 2' X 2' UBEND TROFFER to (2) LED 13w plug & play tubes

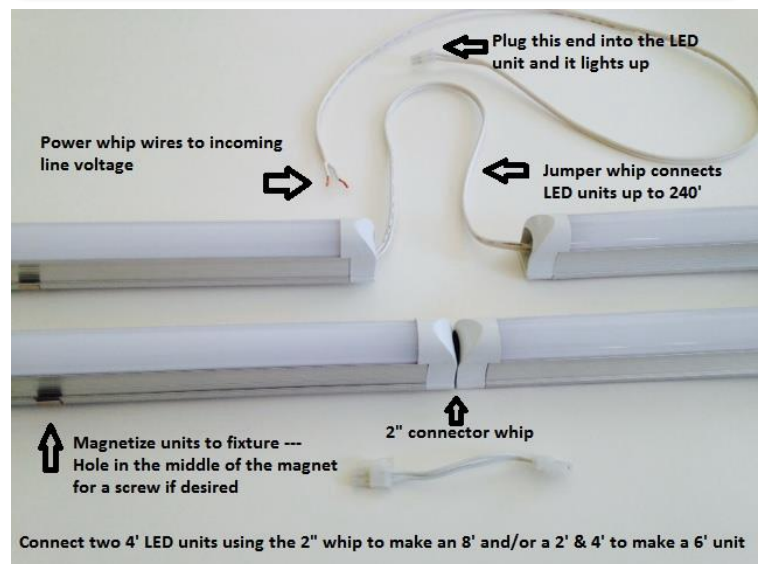

Other retrofits require a new plate and wiring of two new lamp holders on the opposite side of the fixture including removal and disposal of the ballast & possible

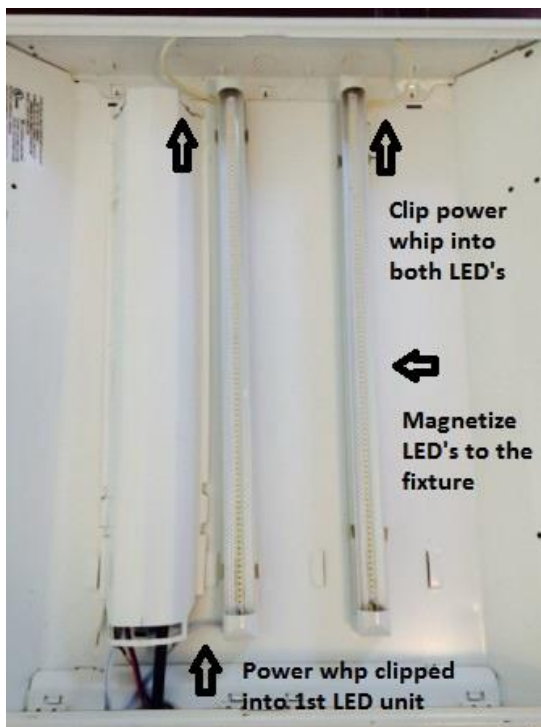

- 1) Turn power off and remove existing U-bend lamps and properly dispose of
- 2) Disconnect the hot & neutral wires coming into the fixture (this will bypass the existing ballast)
- 3) Remove the existing ballast only if needed or required-saves on disposal and labor costs
- 4) Use wire nuts to attach the hot & neutral wires to the power whip
- 5) Plug the power whip into the side of the 1st LED unit
- 6) Magnetize both LED units to the top of the fixture
- 7) Plug the shorter jumper whip from the 1st unit to the 2nd LED units
- 8) Turn power back on and both units will be lit